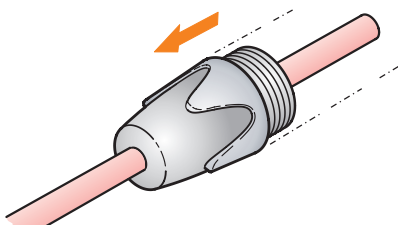
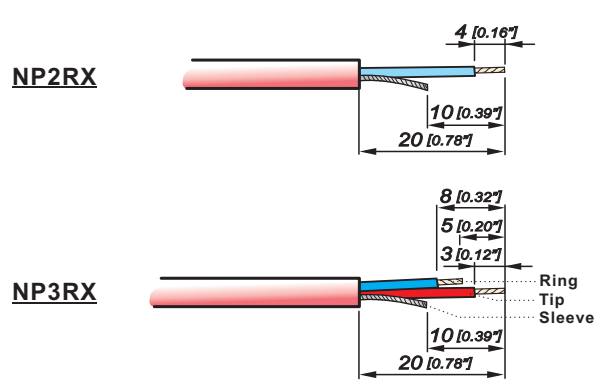


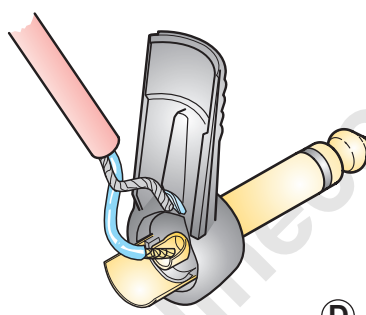
NP*RX Series

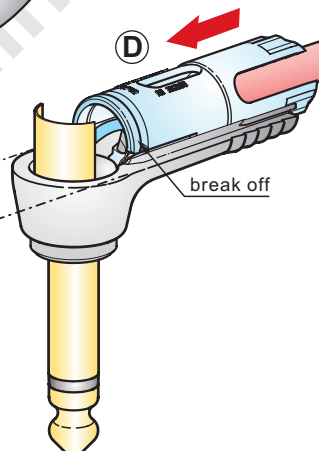
1/4" Professional Right-Angle Phone Plug

Assembly Instruction

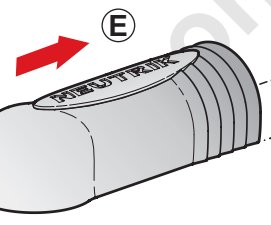
A  Slide the boot onto the cable.

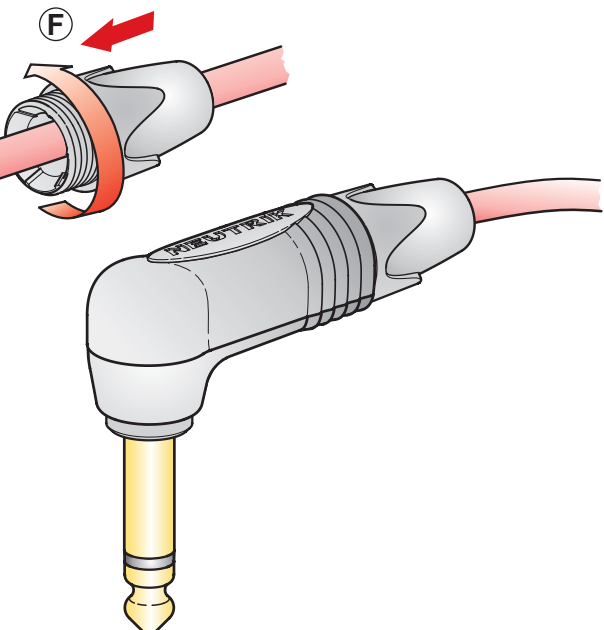
B  Prepare cable as shown.

C  Solder the wire ends in the order Sleeve, Ring and Tip.

D  Position the chuck onto the cable and align chuck with plugfinger.

Attention:
If using a cable with O.D. > 5.50 mm [0.216"] break off marked part of the chuck.

E  Push the cover to the stop position on the shell.

F  Finish the installation by tighten the bushing onto the connector.

NEUTRIK AG
Liechtenstein
Tel.: +423/237 24 24
Fax: +423/232 53 93
www.neutrik.com

NEUTRIK Zürich AG
Switzerland
Tel.: +41 44/736 5010
Fax: +41 44/736 5011

NEUTRIK (UK) Ltd.
Great Britain
Tel.: +44 1983/811 441
Fax: +44 1983/811 439

NEUTRIK USA INC.
USA
Tel.: +1 732/901 9488
Fax: +1 732/901 9608

NEUTRIK Tokyo Ltd.
Japan
Tel.: +81 3/3663 4733
Fax: +81 3/3663 4796

NEUTRIK France
France
Tel.: +33 1/4131 6750
Fax: +33 1/4131 0511

NEUTRIK Vertriebs GmbH
Germany/Netherlands/Austria
Tel.: +49 8131/28 08 90
Fax: +49 8131/28 08-30

Draft. Nr.: BDA 180 / 3102M1511
Update: 09.11.2006



NEUTRIK
CONNECTING THE WORLD