### **Industrial PC Platform NY-series IPC Machine Controller**

# NY5□□-1/NY5□□-5

CSM\_NY5\_\_-1\_DS\_E\_3\_14

# The future will be IT driven, we make you part of it

Our IPC Machine Controller combines proven machine automation with the freedom to use PC technology: working together but independently. So you can leverage Big Data, NUI and IoT to explore manufacturing innovation with no compromise on traditional PLC reliability and robustness. It makes engineers unstoppable and machines innovative yet reliable.





NY512

NY532


### **Features**

#### Standard models

- OS independency allows controller to continue to control if a Windows OS crashes
- Primary task period 500 μs/24 axes
- Retain/non-retain variables 4 MB/64 MB
- 16 to 64 axes
- 192 EtherCAT slaves
- Secure boot and recovery methods
- Powerful 4th-generation CPU technology for optimum performance
- No internal cables in the PC part eliminates faults, maximizes uptime
- Unique simplified thermal design to cut downtime
- Two Gbps Ethernet, one EtherCAT, one DVI, one UPS I/O connector
- Two USB2.0 and two USB3.0 for fast data-transmission

#### NC integrated models

- Integrate NY-series IPC Machine Controller with Numerical Control (NC) functions.
- Realize high-accuracy synchronization motion control (MC) and numerical control (NC) functions by ONE controller.
- Realize the collaboration of machining process and other processes (loader/unloader, press, assembly).
- Support G codes for numerical control.

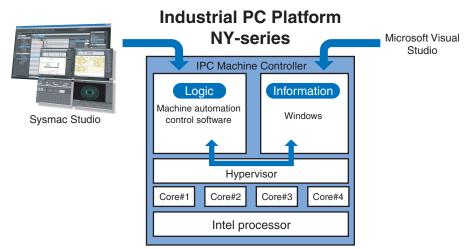


Sysmac is a trademark or registered trademark of OMRON Corporation in Japan and other countries for OMRON factory automation products. Microsoft, Visual Studio and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. EtherCAT® is a registered trademark of Beckhoff Automation GmbH for their patented technology. EtherNet/IPTM, DeviceNet<sup>TM</sup> are trademarks of the ODVA.

The SD and SDHC logos are trademarks of SD-3C, LLC.

Intel, Celeron and Intel Core are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries. Other company names and product names in this document are the trademarks or registered trademarks of their respective companies. The product photographs and figures that are used in this document may vary somewhat from the actual products.

### **System Configuration**

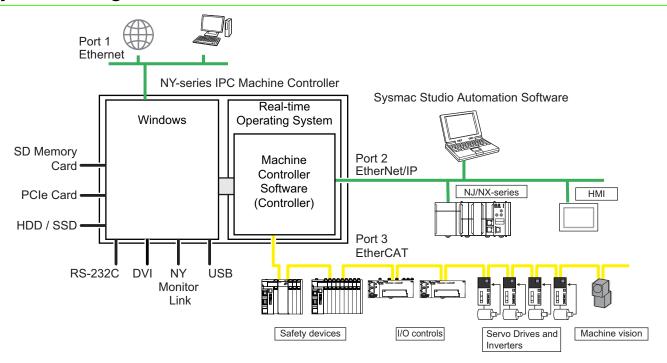

### **Model Number Structure**

The purpose of this model number structure is to provide understanding of the meaning of specifications from the model number. Models are not available for all combinations of code numbers.

NY	5			-		0	0 -	-								
	_	_	_	_	_	_	_	_						45		
1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	1/

	Item	Description	Option	Standard model	NC Integrated model
1	Series name	NY	NY-series Industrial PC Platform	Yes	Yes
2	Controller specifications	5	Large scale, high speed and high precision control application for up to 64 axes.	Yes	Yes
3	Model type	1	Industrial Box PC	Yes	No
3	Model type	3	Industrial Panel PC	Yes	Yes
4	Sequential number	2 or more		Yes	Yes
5	Function module	1	Standard	Yes	No
3	T diletion module	5	Numerical Control (NC)	No	Yes
	Ni walan af awar faw	3	16 axes	Yes	No
6	Number of axes for motion control	4	32 axes	Yes	Yes
	monori derini di	5	64 axes	Yes	No
7	Additional function software module	0	-	Yes	Yes
8	Reserved	0	-	Yes	Yes
9	Expansion slots	1	1 PCle slots	Yes	Yes
10	10 Frame type	1	Aluminum frame, black, and projected capacitive touch type	Yes	Yes
10	r rame type	X	No display (Industrial Box PC)	Yes	No
		1	12.1 inch model	Yes	Yes
11	Display size	2	15.4 inch model	Yes	Yes
		X	No display (Industrial Box PC)	Yes	No
12	os	1	Windows Embedded Standard 7 - 32 bit *1	No	No
-12	00	2	Windows Embedded Standard 7 - 64 bit	Yes	Yes
13	Processor	1	Intel <sup>®</sup> Core <sup>™</sup> i7-4700EQ 4th generation CPU with Fan Unit for active cooling	Yes	Yes
14	Main memory	3	8 GB, non-ECC	Yes	Yes
		8	32 GB, SSD SLC	Yes	No
15	Storage	9	64 GB, SSD SLC	Yes	Yes
15	Storage	С	320 GB, HDD	Yes	No
		K	128 GB, SSD MLC	Yes	Yes
		1	RS-232C	Yes	Yes
16	Optional interface	2	DVI-D	Yes	No
		6	NY Monitor Link	Yes	No
		0	OMRON	Yes	Yes
17	Logo	2	Customized logo *2	Yes	Yes
		X	No display (Industrial Box PC)	Yes	No

**<sup>\*1.</sup>** For the 32 bit version, consult your OMRON sales representative. (NY5□□-1)

<sup>\*2.</sup> Customization only available in Europe.

### **Ordering Information**

#### **Recommended models**

The industrial PC Platform has extended configuration possibilities to meet your requirements, below an overview of the most used and recommended models. Selecting one of the models below will bring the benefit of faster delivery times.

In case your preferred model is not listed below, please contact your Omron representative to discuss the possibilities.

### **NY-series IPC Machine Controller**

Product name	Operating system	CPU type	CPU type Number of RAM me motion (non-ECC axes		Storage size	Interface option	Model	
			64		64 GB SSD type (SLC)		NY512-1500-1XX21391X	
		Intel <sup>®</sup> Core™ i7- 4700EQ	04		320 GB HDD type		NY512-1500-1XX213C1X	
Industrial	Windows Embedded Standard 7 - 64bit		32 16	8 GB	64 GB SSD type (SLC)	RS-232C	NY512-1400-1XX21391X	
Box PC					320 GB HDD type		NY512-1400-1XX213C1X	
					64 GB SSD type (SLC)		NY512-1300-1XX21391X	
					320 GB HDD type		NY512-1300-1XX213C1X	
			64		64 GB SSD type (SLC)		NY532-1500-111213910	
			04	8 GB	320 GB HDD type		NY532-1500-111213C10	
Industrial	Windows Embedded	Intel® Core™ i7-	32		64 GB SSD type (SLC)	DC 000C	NY532-1400-111213910	
Panel PC	Standard 7 - 64bit	4700EQ	32		320 GB HDD type	RS-232C	NY532-1400-111213C10	
			16		64 GB SSD type (SLC)		NY532-1300-111213910	
					320 GB HDD type	1	NY532-1300-111213C10	

### **NY-series IPC Machine Controller NC Integrated Controller**

Specifications									
Product name	Operating system	CPU type	Number of motion axes	NC Function	RAM memory (non-ECC type)	Storage size	Interface option	Monitor	Model
		Standard 7   Core M 1/- 32 3		Outed Freeble 460	8 GB	64 GB SSD (SLC)		12.1 inches, 1.280 × 800 pixels.	NY532-5400-111213910
Industrial	Windows Embedded		ed Core™ i7- 32 <b>*1</b> Enable <b>*</b>			128 GB SSD (MLC)	RS-232C	24-bit full color	NY532-5400-111213K10
Panel PC Standard 7 64 bit	Standard 7			Lilable *2		64 GB SSD (SLC)	H3-2320	15.4 inches, 1.280 × 800 pixels.	NY532-5400-112213910
	0.0.0					128 GB SSD (MLC)		24-bit full color	NY532-5400-112213K10

<sup>\*1.</sup> The number of controlled axes of the MC Control Function Module is included.

#### **Automation Software Sysmac Studio**

Please purchase a DVD and required number of licenses the first time you purchase the Sysmac Studio. DVDs and licenses are available individually. Each model of licenses does not include any DVD.

Product name	Specifications	Number of licenses Media		Model	
Sysmac Studio Standard	The Sysmac Studio is the software that provides an integrated environment for setting, programming, debugging and maintenance of machine automation controllers including the NJ/ NX-series CPU Units, NY-series Industrial PC, EtherCAT Slave, and the HMI.  Sysmac Studio runs on the following OS.  Windows 7 (32-bit/64-bit version)/Windows 8 (32-bit/64-bit version)/Windows 8.1 (32-bit/64-bit	_ (Media only)	DVD	SYSMAC-SE200D	
Edition Ver.1.□□	version)/Windows 10 (32-bit/64-bit version)  The Sysmac Studio Standard Edition DVD includes Support Software to set up EtherNet/IP Units, DeviceNet slaves, Serial Communications Units, and Support Software for creating screens on HMIs (CX-Designer).  Refer to your OMRON website for details.	1 license *	_	SYSMAC-SE201L	

<sup>\*</sup> Multi licenses are available for the Sysmac Studio (3, 10, 30, or 50 licenses).

#### Collection of software functional components Sysmac Library

Please download it from following URL and install to Sysmac Studio. http://www.ia.omron.com/sysmac\_library/

#### **Typical Models**

Product	Features	Model
Vibration Suppression Library	The Vibration Suppression Library is used to suppress residual vibration caused by the operation of machines.	SYSMAC-XR006
Device Operation Monitor Library	The Device Operation Monitor Library is used to monitor the operation of devices such as air cylinders, sensors, motors, and other devices.	SYSMAC-XR008
Dimension Measurement Library	The Dimension Measurement Library is used to dimension measurement with ZW-7000/5000 Confocal Fiber Displacement Sensor, or E9NC-TA0 Contact-Type Smart Sensor.	SYSMAC-XR014

<sup>\*2.</sup> One CNC Operator License (SYSMAC-RTNC0001L) is attached with the CPU Unit.

### **Operation Software CNC Operator**

Please purchase a DVD or download it from following URL.

http://www.ia.omron.com/cnc-operator/
One CNC Operator License (SYSMAC – RTNC0001L) is attached with the CPU Unit.


Product name	Specifications	Number of licenses Media		Model	Standards
	The CNC Operator is the software that provides a operation interface for NC programming, debugging and	(Installer only)	(Download)	SYSMAC-RTNC0000	
CNC Operator	maintenance of CNC machine.  CNC Operator runs on the following OS.  Windows 7 (32-bit/64-bit version)/Windows 8 (32-bit/64-bit version)/Windows 8.1 (32-bit/64-bit version)/Windows 10 (32-bit/64-bit version)	 (Media only)	DVD	SYSMAC-RTNC0000D	
CNC Operator License	The one license key ( hardware key, USB dongle). The CNC Operator needs license key.	1 license		SYSMAC-RTNC0001L	
CNC Operator Software Development Kit	The CNC Operator Software Development Kit provides a environment for customization of CNC Operator.  Supported execution environment: .NET Framework (4.6.1)  Development environment: Visual Studio 2013/2015  Development languages: C#		DVD	SYSMAC-RTNC0101D	

### **Accessories**

### **Optional Hardware**

Product name	Specifications	Model
Mounting Brackets *1	Book mount	NY000-AB00
Mounting Brackets &1	Wall mount	NY000-AB01
SD Memory Cards	Card type: SD Card Capacity: 2 GB Format: FAT16	HMC-SD291
ob memory cards	Card type: SDHC Card Capacity: 4 GB Format: FAT32	HMC-SD491
USB Flash Drives	Capacity: 2 GB	FZ-MEM2G
OOD I lasii brives	Capacity: 8 GB	FZ-MEM8G
	Storage type: HDD Capacity: 320 GB	NY000-AH00
Storage Devices	Storage type: SSD SLC Capacity: 32 GB	NY000-AS00
otorage bevious	Storage type: SSD SLC Capacity: 64 GB	NY000-AS01
	Storage type: SSD MLC Capacity: 128 GB	NY000-AS02 <b>*3</b>
USB Type-A to USB Type-B	Cable length: 2 m USB 2.0 Minimum bend radius: 25 mm	FH-VUAB 2M
Cables	Cable length: 5 m USB 2.0 Minimum bend radius: 25 mm	FH-VUAB 5M
DVI Cables	Cable length: 2 m Supports DVI-D Minimum bend radius: 36 mm	NY000-AC00 2M
DVI Cables	Cable length: 5 m Supports DVI-D Minimum bend radius: 36 mm	NY000-AC00 5M
Industrial Monitor	LCD touchscreen Multi-touch functionality Supply voltage: 24 VDC Up to 1,280 x 800 pixels at 60 Hz 2 USB Type-A Connectors Programmable brightness control Standard and 100 m cable models are available.	NYM1□W-C10□□
Power Supply	Output voltage: 24 VDC     Push-In Plus terminal blocks	S8VK-S□□24
UPS *2	Output voltage during backup operation: 24 VDC ± 5%	S8BA
UPS Communication Cable	Cable length: 2 m Signals for • Signal output (BL, TR, BU, WB) • Remote ON/OFF input • UPS Stop Signal input (BS)	S8BW-C02

The revision number of the UPS can be retrieved from the serial number label on the product and the product packaging.

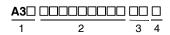

Item	Description
1	Product code
2	Product period and sequential number
3	Revision number
4	RoHS status

<sup>\*1.</sup> Select the required type. Industrial Box PC type only.
\*2. Revision number 04 or higher.
\*3. Orders for NY000-AS02 will be accepted until the end of November 2018.

### **Spare Parts**

The following spare parts for the Industrial PC are available.

Product name	Specifications	Model
Battery	One battery is supplied with the Industrial PC. The battery supplies power to the real-time clock. The battery is located inside the Industrial PC. Service life: 5 years at 25°C	CJ1W-BAT01
Fan Unit	The Fan Unit is available for the Industrial PC that has active cooling. Service life: 70,000 hours of continuous operation at 40°C with 15% to 65% relative humidity.  Shelf life: 6 months This is the storage limitation with no power supplied.	NY000-AF00
Accessory Kit	Replacement kit containing all accesories supplied with Industrial PC.  • Power connector  • I/O connector  • Drive bracket for drive installation  • 4 mounting screws for drive installation  • PCIe Card support for PCIe Card installation  • PCIe Card clip for PCIe Card installation	NY000-AK00

### **Installed Support Software**

Item	Specifications
Industrial PC Support Utility	The Industrial PC Support Utility is a software utility to assist in diagnosing and resolving problems of the Industrial PC. It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial PC Tray Utility	The Industrial PC Tray Utility is a software utility that provides information about the current state of the Industrial PC, its related devices, and associated software.  It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial PC System API	The Industrial PC System API allows programmers to create programs that can retrieve information or set an indicator status of the Industrial PC.  The API makes use of the included IPC System Service to manage the hardware.  It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial Monitor Utility	The Industrial Monitor Utility provides a user interface to control settings and display details of connected Industrial Monitors.  It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial Monitor Brightness Utility	The Industrial Monitor Brightness Utility is a small software utility that allows you to control the brightness of the screen backlight of all connected Industrial Monitors.  It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial Monitor API	The Industrial Monitor API allows programmers to create applications that can control the hardware features and retrieve information from connected Industrial Monitors.  It is pre-installed on the Industrial Box PC and the Industrial Panel PC.
Industrial PC Rescue Disk Creator	The Industrial PC Rescue Disk Creator creates a USB Rescue Disk which can be used to back-up and restore the Omron IPC Operating System. It is pre-installed on the Industrial Box PC and the Industrial Panel PC.

#### Recommended EtherCAT and EtherNet/IP Communications Cables

Use a straight STP (shielded twisted-pair) cable of category 5 or higher with double shielding (aluminum tape and braiding) for EtherCAT. For EtherNet/IP, required specification for the communications cables varies depending on the baud rate.

For 100BASE-TX/10BASE-T, use a straight or cross STP (shielded twisted-pair) cable of category 5 or higher.

For 1000BASE-T, use a straight or cross STP cable of category 5e or higher with double shielding (aluminum tape and braiding).

#### **Cabel with Connectors**

Item	Appearance	Recommended manufacturer	Cable length (m)	Model
			0.3	XS6W-6LSZH8SS30CM-Y
Cable with Connectors on Both Ends (RJ45/RJ45)			0.5	XS6W-6LSZH8SS50CM-Y
Standard RJ45 plugs type *1 Wire Gauge and Number of Pairs: AWG26, 4-pair Cable		OMBON	1	XS6W-6LSZH8SS100CM-Y
Cable Sheath material: LSZH *2		OWRON	2	XS6W-6LSZH8SS200CM-Y
Cable color: Yellow *3	4		3	XS6W-6LSZH8SS300CM-Y
			5	XS6W-6LSZH8SS500CM-Y
			0.3	XS5W-T421-AMD-K
Cable with Connectors on Both Ends (RJ45/RJ45)			0.5	XS5W-T421-BMD-K
Rugged RJ45 plugs type *1	100	OMRON	1	XS5W-T421-CMD-K
Wire Gauge and Number of Pairs: AWG22, 2-pair Cable	*O		2	XS5W-T421-DMD-K
Cable color: Right blue			5	XS5W-T421-GMD-K
			10	XS5W-T421-JMD-K
		OMRON	0.5	XS5W-T421-BM2-SS
Cable with Connectors on Both Ends (M12 Straight/M12 Straight)	_		1	XS5W-T421-CM2-SS
Shield Strengthening Connector cable *4 M12/Smartclick Connectors			2	XS5W-T421-DM2-SS
Wire Gauge and Number of Pairs: AWG22, 2-pair Cable	000	OWINON	3	XS5W-T421-EM2-SS
Cable color: Black			5	XS5W-T421-GM2-SS
			10	XS5W-T421-JM2-SS
0.11 31 0 1 5 1 (M40.0) 3 1 (72.37)			0.5	XS5W-T421-BMC-SS
Cable with Connectors on Both Ends (M12 Straight/RJ45) Shield Strengthening Connector cable *4			1	XS5W-T421-CMC-SS
M12/Smartclick Connectors	15	OMRON	2	XS5W-T421-DMC-SS
Rugged RJ45 plugs type	00	OWINON	3	XS5W-T421-EMC-SS
Wire Gauge and Number of Pairs: AWG22, 2-pair Cable Cable color: Black			5	XS5W-T421-GMC-SS
			10	XS5W-T421-JMC-SS

- **\*1.** Cables with standard RJ45 plugs are available in the following lengths: 0.2 m, 0.3 m, 0.5 m, 1 m, 1.5 m, 2 m, 3 m, 5 m, 7.5 m, 10 m, 15 m, 20 m. Cables with rugged RJ45 plugs are available in the following lengths: 0.3 m, 0.5 m, 1 m, 2 m, 3 m, 5 m, 10 m, 15 m. For details, refer to the *Industrial Ethernet Connectors Catalog* (Cat. No. G019).
- \*2. The lineup features Low Smoke Zero Halogen cables for in-cabinet use and PUR cables for out-of-cabinet use. Although the LSZH cable is single shielded, its communications and noise characteristics meet the standards.
- **\*3.** Cable colors are available in yellow, green, and blue.
- **\*4.** For details, contact your OMRON representative.

### **Cables / Connectors**

	Item	Recommended manufacturer	Model	
Products for EtherCAT or			Hitachi Metals, Ltd.	NETSTAR-C5E SAB 0.5 × 4P *1
EtherNet/IP	Wire Gauge and Number of Pairs: AWG24, 4-pair Cable	Cables	Kuramo Electric Co.	KETH-SB *1
(1000BASE-T *3/ 100BASE-TX)	Pairs: AWG24, 4-pair Cable		SWCC Showa Cable Systems Co.	FAE-5004 *1
		RJ45 Connectors	Panduit Corporation	MPS588-C *1
	Wire Gauge and Number of Pairs: AWG22, 2-pair Cable	Cables	Kuramo Electric Co.	KETH-PSB-OMR *2
		Cables	JMACS Japan Co., Ltd.	PNET/B *2
Products for EtherCAT or EtherNet/IP (100BASE-TX/10BASE-T)		RJ45 Assembly Connector	OMRON	XS6G-T421-1 *2

**<sup>\*1.</sup>** We recommend you to use above Cable, and RJ45 Connector together.

Note: Connect both ends of cable shielded wires to the connector hoods.

<sup>\*2.</sup> We recommend you to use above Cable, and RJ45 Assembly Connector together.

**<sup>\*3.</sup>** The products can be used only with thes NX701.

## **Specifications**

### Performance Specifications Supported by NY5□□-1/NY5□□-5

				NY5□□-			
		Item		15□□	14□□/5400	13□□	
Processing	Instruction	LD instruction		0.33 ns			
time	execution times	Math instructions	Math instructions (for Long Real Data)				
		Size		40 MB			
	Program capacity	Number	POU definition	3,000			
	•	Number	POU instance	24,000			
Programming		No retain	Size	64 MB			
riogramming	Variables capacity	attribute	Number	180,000			
	variables capacity	Retain attribute	Size	4 MB			
		netalli attribute	Number	40,000			
	Data type	Number		4,000			
Unit configuration	Maximum number of connectable units	Maximum numbe	r of NX unit on the system	4,096 (on NX series I	EtherCAT slave termi	nal)	
		Maximum number of controlled axes		Maximum number of The number of contro + The number of sing	lled axes = The numb	er of motion control axes	
				64 axes	32 axes	16 axes	
			Motion control axes		Maximum number of motion control axes which can be defined. A motion control function is available.		
				64 axes	32 axes	16 axes	
	Number of controlled axes	Maximum number of used real axes		Maximum number of The Number of used encoder axes.		llowing servo axes and	
Motion control			Used motion control servo axes	available. The number of used	The number of used motion control servo axes = The numb motion control axes whose axis type is set to servo axis and a		
				64 axes	32 axes	16 axes	
		Maximum numbe axis control	Maximum number of axes for linear interpolation axis control		4 axes per axes group		
		Number of axes for o	circular interpolation axis control	2 axes per axes group			
	Maximum number o	f axes groups		32 axes groups			
	Motion control perio	Motion control period			The same control period as that is used for the process data communications cycle for EtherCAT.		
		Number of cam	Maximum points per cam table	65,535 points			
	Cams	data points	Maximum points for all cam tables	1,048,560 points			
		Maximum numbe	r of cam tables	640 tables			
	Position units			Pulses, millimeters, n	nicrometers, nanome	ters, degrees and inches	
	Override factors			0.00% or 0.01% to 500.00%			

 $<sup>\</sup>pmb{*1.} \textbf{This is the capacity for the execution objects and variable tables (including variable names)}.$ 

		lko-m			NY5□□-	
		Item		15□□	14□□/5400	13□□
	Number of port			1	<u>'</u>	
	Physical layer			10BASE-T/100BAS	E-TX/1000BASE-T	
	Frame length			1,514 max.		
	Media access metho	od		CSMA/CD		
	Modulation			Baseband		
	Topology			Star		
	Baud rate			1Gbps (1000BASE-	T)	
	Transmission media	 3		STP (shielded, twiste	ed-pair) cable of Ethernet ca	ategory 5, 5e or high
	Maximum transmiss	sion distance betwe	en Ethernet switch and node	100 m		
	Maximum number o	f cascade connecti	ons	There are no restric	tions if Ethernet switch is a	used.
		Maximum numbe	r of connections	128		
		De alest intermed the	<u> </u>	1 to 10,000 ms in 1.	0-ms increments	
		Packet interval *	2	Can be set for each	connection.	
		Permissible com	nunications band *3	20,000 pps including	g heartbeat	
Built-in		Maximum numbe	r of tag sets	128		
therNet/IP Port		Tag types		Network variables		
OIL	CIP service: Tag	Number of tags pe	er connection (i.e., per tag set)	8 (7 tags if Controlle	er status is included in the	tag set.)
	data links (Cyclic communications)	Maximum link data size per node (total size for all tags)		184,832 byte		
		Maximum number of tag		256		
		Maximum data siz	ze per connection	1,444 bytes		
		Maximum number of registrable tag sets		128 (1 connection = 1 tag set)		
		Maximum tag set size		1,444 bytes (Two bytes are used	d if Controller status is incl	uded in the tag se
	Multi-cast packet filter *4			Supported.		
		Class 3 (number of connections)			rer)	
	Cip Message Service: explicit messages	исмм	Maximum number of clients that can communicate at one time	32		
		(non-connection type)	Maximum number of servers that can communicate at one time	32		
	Maximum number o	f TCP socket servi	ce	30		
	Number of port			1		
	Communications st	andard		IEC 61158 Type12		
	EtherCAT master sp	pecifications		Class B (Feature Pa	ack Motion Control complia	ant)
	Physical layer			100BASE-TX		
	Modulation			Baseband		
	Baud rate			100 Mbps (100Base	e-TX)	
	Duplex mode			Auto		
	Topology			Line, daisy chain, ar	nd branching	
Built-in	Transmission media	a		Twisted-pair cable of	of category 5 or higher raight cable with aluminum	tape and braiding
therCAT port	Maximum transmiss	sion distance between	en nodes	100 m	_ <del>-</del>	
	Maximum number o	of slaves		192		
	Range of node addr			1-512		
	Maximum process of	lata size		Inputs: 5,736 bytes Outputs: 5,736 byte (However, the maxi	s mum number of process d	ata frames is 4.)
	Maximum process of	data size per slave		Inputs: 1,434 bytes Outputs: 1,434 byte	·	,
	Communications cy	rcle		500 μs to 8 ms (in 2		
	Sync jitter			1 μs max.	. ,	
nternal clock	,			At ambient tempera At ambient tempera	ture of 55°C: -3.5 to +0.5 r ture of 25°C: -1.5 to +1.5 r ture of 0°C: -3 to +1 min e	min error per mon

 $<sup>\*2</sup>$ . Data will be refreshed at the set interval, regardless of the number of nodes.

<sup>\*3. &</sup>quot;pps" means packets per second, i.e., the number of communications packets that can be sent or received in one second.

\*4. As the EtherNet/IP port implements the IGMP client, unnecessary multi-cast packets can be filtered by using a switching hub that supports IGMP Snooping.

### Performance Specifications Supported by NY5□□-5

		lkom	NY532-	
		Item		5400
	Task period	Primary periodic cycle		500/1,000/2,000/4,000/8,000 μs
	rask period	CNC Planner Service per	riod	500 μs to 16 ms
	Number of CNC motors	Maximum number of CN	C motors *1	32
		Maximum number of CN	C coordinate systems	8
	CNC coordinate system	Maximum number of CNC motor configurations that are included in a CNC coordinate system (excluding spindle axes)		8
	cyclo	Number of spindle axes coordinate system	that are included in a CNC	1
Numerical	Number of simu	Iltaneous interpolation axe	es	4
Control		Program buffer size *2		64 MB
	NC Program	Maximum number of	Upper limit of main registrations	512
		programs	Upper limit of sub registrations	512
		P variable		Double-precision floating point 65536 *3
	NC program variables	Q variable		Double-precision floating point 8192 *3
		L variable		Double-precision floating point 256
	CNC motor	Maximum number of CN	C motor compensation tables	64
	compensation table	Maximum size of all com	pensation tables	2 MB

<sup>\*1.</sup> The number of controlled axes of the MC Control Function Module is included.

<sup>\*2.</sup> The number of programs and their capacities that can be loaded into the CPU Unit at the same time. The program capacity is the maximum size available. As fragmentation will occur, the size that is actually available will be smaller than the maximum size.

\*3. Some parts of the area are reserved by the system.

Some function specifications are common with the NJ/NX-series Machine Automation Controller.

"CPU Unit" described in the Function Specifications Supported by NY5 D-1/NY5 D-5 means "Controller" in the NY Series.

### Function Specifications Supported by NY5□□-1/NY5□□-5

	Item		NY5□□-1/NY5□□-5
Function			I/O refreshing and the user program are executed in units that are calle tasks. Tasks are used to specify execution conditions and execution priority.
	Periodically periodic tasks		1
	CACCUICU IUSKS	Maximum number of periodic tasks	3
	Conditionally	Maximum number of event tasks	32
	executed tasks	Execution conditions	When Activate Event Task instruction is executed or when condition expression for variable is met.
POII (program	Programs		POUs that are assigned to tasks.
organization	Function blocks		POUs that are used to create objects with specific conditions.
units)	Functions		POUs that are used to create an object that determine unique outputs for the inputs, such as for data processing.
Programming languages	Types		Ladder diagrams *1 and structured text (ST)
Namespaces			A concept that is used to group identifiers for POU definitions.
Variables	External access of variables	Network variables	The function which allows access from the HMI, host computers, or othe Controllers
		Boolean	BOOL
		Bit strings	BYTE, WORD, DWORD, LWORD
		Integers	INT, SINT, DINT,LINT, UINT, USINT, UDINT, ULINT
		Real numbers	REAL, LREAL
		Durations	TIME
	types	Dates	DATE
		Times of day	TIME_OF_DAY
		Date and time	DATE_AND_TIME
Data types		Text strings	STRING
	Derivative data t	ypes	Structures, unions, enumerations
		Function	A derivative data type that groups together data with different variable types.
		Maximum number of members	2048
	Structures	Nesting maximum levels	8
	Structures	Member data types	Basic data types, structures, unions, enumerations, array variables
		Specifying member offsets	You can use member offsets to place structure members at any memor locations.
	Unions	Function	A derivative data type that groups together data with different variable types.
		Maximum number of members	4
		Member data types	BOOL, BYTE, WORD, DWORD, LWORD
	Enumerations	Function	A derivative data type that uses text strings called enumerators to expression variable values.
		Function	An array is a group of elements with the same data type. You specify th number (subscript) of the element from the first element to specify the element.
Data tuna		Maximum number of dimensions	3
attributes	oposinoutions	Maximum number of elements	65535
		Array specifications for FB instances	Supported.
	Range specificat	ions	You can specify a range for a data type in advance. The data type can take only values that are in the specified range.
Libraries			User libraries
+			position control, velocity control, torque control
			Servo axes, virtual servo axes, encoder axes, and virtual encoder axes
Positions that c	an be managed		Command positions and actual positions
		Absolute positioning	Positioning is performed for a target position that is specified with an absolute value.
	Single-axis	Relative positioning	Positioning is performed for a specified travel distance from the comman current position.
	position control	Interrupt feeding	Positioning is performed for a specified travel distance from the position where an interrupt input was received from an external input.
Cinals suis		Cyclic synchronous absolute	A positioning command is output each control period in Position Control
Single-axis		positioning	Mode.
Single-axis	Single-axis velocity control	positioning  Velocity control  Cyclic synchronous velocity control	Mode.  Velocity control is performed in Position Control Mode.  A velocity command is output each control period in Velocity Control Mode.
	POU (program organization units)  Programming languages Namespaces  Variables  Data types  Libraries Control modes Axis types	Periodically executed tasks  Conditionally executed tasks  POU (program organization units)  Programming languages  Namespaces  Variables  External access of variables  Basic data types  Derivative data types  Unions  Enumerations  Data type  attributes  Array specifications  Array specifications  Libraries  Control modes  Axis types  Positions that can be managed  Single-axis	Periodically executed tasks   Maximum number of primary periodic tasks   Maximum number of periodic tasks   Maximum number of event tasks   Execution conditions

**<sup>\*1.</sup>** Inline ST is supported. (Inline ST is ST that is written as an element in a ladder diagram.)

Single-axis					
Single-axis synchronized control			Item		
Single-axis synchronized control of speaking pear operation positioning pear operation synchronized control of speaking pear operation synchronized control of speaking pear operation synchronized positioning pear operation synchronized positioning pear operation synchronized positioning axis of speaking pear makes axis and salvae axis. In a practical pear axis in synchronized control is shifted.    Positioning axis   Positioning speaking pear makes axis in synchronized control is shifted.				Starting cam operation	A cam motion is performed using the specified cam table.
Single-axis synchronized control    Single-axis synchronized control   Fedding gear operation   Age amonom with the specified gear ratio and sync position is performed between a master axis and slave axis.   Age amonom with the specified gear ratio and sync position is performed between a master axis and slave axis.   Age amonom of a master axis and slave axis.   Age amonom of a master axis and slave axis.   Age amonom of a master axis and slave axis.   Age amonom of a master axis and slave axis.   Age amonom of a master axis and slave axis.   Age amonom of a master axis and slave axis.   Age amonom of a master axis and slave axis.   Age amonom of a master axis and slave axis.   Age amonom of a master axis and substracted and the result as output as the command positions of two axes are added or subtracted and the result as output as the command positions of two axes are added or subtracted and the result as output as the command position or activate and the first signals, and home signal are used to define home.   A motor is operated and the limit signals, home provenity signal, and home signal are used to define home.   A motor is operated and the limit signals, home provenity signal, and home signal are used to define home.   A motor is operated and the limit signals, home provenity signal, and home signal are used to define home.   A motor is operated and the limit signals, home provenity and a master axis.   A motor is operated and the limit signals, home provenity and an axis and the provenity and are used to define home.   A motor is operated and the limit signals, home provenity.   A motor is operated and the limit signals, home provenity.   A motor is operated and the limit signals, home provenity.   A motor is operated and the limit signals, home provenity.   A motor is operated and the limit signals, home provenity.   A motor is operated and the limit signals, home provenity.   A motor is operated and the limit signals, home provenity.   A motor is operated and the limit signals, home provenity.   A				Ending cam operation	The cam motion for the axis that is specified with the input parameter is ended.
Motion control  Militarea Reading Sear operation in the specified ranks and slave axis. Sear of the specified ranks are specified master axis in deciding sear operation in the specified master axis. Poster axis phase shift in the specified master axis. The phase of a master axis in syndronized cortor is shifted. The command position is performed in sync with a specified master axis. Single-axis in specified master axis. The specified master axis in specified ranger to cortor is shifted. The command position of two axes are added or subtracted and the result is couplut as the command position. The service is formed ON to enable axis motion. Journal of the specified target velocity. The service is specified target velocity. The service is repeated and the limit signals, home proximity signal, and home signal are used to define home. The service is repeated and the limit signals, home proximity signal, and home signal are used to define home. The service is repeated and the limit signals, home proximity signal, and home signal are used to define home. The service is repeated and the limit signals, home proximity signal, and home signal are used to define home. The service is repeated and the limit signals, home proximity signal, and home signal are used to define home. The service is repeated and the limit signals, home proximity signal, and home signal are used to define home. The service is repeated and the limit signals, home proximity signal, and home signal are used to define home. The service is set specified with the specified rate. The proximity signal, and home signal are used to define home. The service is set specified and a stock at the specified rate. The proximity signal, and home signal are used to define home. The section of the service is set specified rate. The section of the service is set specified to a stock at the specified rate. The section of the service is set specified rate. The section of the service is set specified to a stock at the section of the service is set specified to a stock at				Starting gear operation	
Single-axis   Single-axis   Single-axis   Single-axis   Single-axis   Single-axis   Single-axis   Single-axis   Single-axis   Powering the servo   The Servo in the Servo Drive is turned ON to enable axis motion.				Positioning gear operation	
Motion control  Master axis phase shift  Combining axes    Single-axis emanual operation   Powering the servo   The Searo in the Sarvo Dives its unsed ON to enable axis motion.			control	Ending gear operation	The specified gear motion or positioning gear motion is ended.
Single-axis   Single-axis   Single-axis   Single-axis   Single-axis   Single-axis   Single-axis   Powering the servo   The Servo in the Servo Drive is burned ON to enable axis motion.    Powering the servo   The Servo in the Servo Drive is burned ON to enable axis motion.				Synchronous positioning	Positioning is performed in sync with a specified master axis.
Single-axis   Single-axis   Powering the servo   The Sarvo in the Sarvo Drive is turned ON to enable axis motion.   Jogding   An axis is jogged at a specified target velocity.				Master axis phase shift	The phase of a master axis in synchronized control is shifted.
Single-axis analy operation   An axis is pogged at a specified target velocity.				Combining axes	i ·
Notion control    Single-axis   Single-axis   Resetting axis errors   Axes errors are cleared.			Single-axis	Powering the servo	<u> </u>
Single-axis   Single-axis   Single-axis   Honing with parameter   Honing with parameter   Honing with parameter   Honing with parameter   Specifying the parameter, a motor is operated and the limit signals, home proximity signal, and home signal are used to define home.   High-speed homing   Sopelying the parameter and the limit signals, home proximity signal, and home signal are used to define home.   High-speed homing   Postalinoring is performed for an absolute taget position of 0 to return to home.   Auxiliary functions for single-axis control   Auxiliary functions for single-axis control   Auxiliary functions for single-axis control   Figure 1   Auxiliary functions for single-axis control   Figure 2   Auxiliary functions for more single-axis control   Figure 3   F			manual		
Single-axis    Figure   Single-axis   Single-axis   Homing   A motor is operated and the limit signals, home proximity signal, and home signal are used to define home.			орогилон	Resetting axis errors	Axes errors are cleared
Noming   Nome signal are used to define home.				nesetting axis errors	
Motion control				Homing	home signal are used to define home.
Motion control  Motion control  Motion control  Axes groups  Axes group self-  Axes groups  Axes group self-  Axes groups  Axes groups  Axes groups  Axes group self-  Axes group self-  Axes groups  Axes group self-  Axes gro		Oin als suis		Homing with parameter	proximity signal, and home signal are used to define home.
Auxiliary functions for single-axis control  Motion control  Multi-axes coordinated control  Absolute linear interpolation Control  Auxiliary functions for single-axis control  Multi-axes coordinated control  Absolute linear interpolation Circular 2D interpolation Circular 2D interpolation Circular 3D interpolation is performed to a specified desboulded position. Circular 3D interpolation Circular 3D interpolation is performed to a specified relative position. Circular 3D interpolation is performed to a specified desboulded position. Circular 3D interpolation is performed to a specified relative position. Circular 3D interpolation is performed to a specified relative position. Circular 3D interpolation is performed to a specified relative position. Circular 3D interpolation is performed to a specified relative po		Single-axis		High-speed homing	Positioning is performed for an absolute target position of 0 to return to home.
Auxiliary functions for single-axis control  Motion control  Motion control  Multi-axes coordinated control  Axes groups  Common items  Common items  Common items  Axes group functions or groups and axes group positions or groups are group grameters and position or grow are group grameters and position or grow parameters can be changed to a reposition. The command current position or a axes group parameters are overwritten temporariary.  Feating axes group propriet  Common items  Feating axes group propriet  Common items  Feating can table s  Common items  Axes group functions for multi-axes group groups are group grameters and positions or group grameters are overwritten temporariary.  Feating axes group propriet  Cams  Cams  Cams  Feating cam tables  Writing MC settings  Writing MC settings  Common items  Axes group parameters or axes group parameters are overwritten temporarily.  Feat and the component of a specified in the input parameter is generated from the camp to group parameters are overwritten temporarily.  The cam table that is specified with the input parameter is generated from the camp to group parameters are overwritten temporarily.  The cam table intension of an axes group parameters or axes group parameters are overwritten temporarily.  The cam table that is specified with the input parameter is saved in nonviolate temporarily.  Feature the property and can mode.  Writing MC settings  Writing MC settings  Setting are group parameters or axes group parameters are overwritten temporarily.  The cam table that is specified with the input parameter is generated from the cam properly and can mode.  Writing MC settings  Setting are group parameters or axes group parameters are overwritten temporarily.				Stopping	An axis is decelerated to a stop at the specified rate.
Availiary functions for single-axis control  Motion control  Motion control  Motion control  Motion control  Axes groups  Axes groups groups groups  Axes groups groups groups  Axes groups groups and axes groups groups and axes groups groups groups  Axes groups  Axes groups  Axes groups  Axes groups groups groups  Axes groups  Axes groups  Axes groups  Axes groups groups groups  Axes groups  A				Immediately stopping	An axis is stopped immediately.
Motion control				Setting override factors	The target velocity of an axis can be changed.
Motion control   Moti			Auxiliary	Changing the current position	
Motion control  Resetting the following error command position of an axis to see when it is within a specified range (zone).  Monitoring axis following error control  Resetting the following error command courtent position of an axis.  Monitoring axis following error command courtent position of an axis control command courtent position of an axis control command courtent position and actual current position is set to 0.  Torque limit compensate the control control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.  Multi-axes coordinated control  Start velocity  Multi-axes coordinated control  Absolute linear interpolation  Circular 2D interpolation is performed to a specified relative position.  Circular 2D interpolation  Circular 2D interpolation is performed to a specified relative position.  Circular 2D interpolation is performed to a specified relative position.  Circular 2D interpolation  Circular 2D interpolation is performed to a specified relative position.  Circular 2D interpolation  Axes group cyclic synchronous absolute position in performed to a specified relative position.  Circular 2D interpolation is performed to a specified velocity position.  Circular 2D interpolation is performed to a specified velocity of the control period in Position Control Mode.  Axes group cyclic synchronous absolute position in a pass group is enabled.  Disabiling axes groups  Motion of an axes group is enabled.  Disabiling axes groups  Motion of an axes group is disabled.  All axes in interpolated motion are stopped immediately.  Setting axes group positions  Reading axes group positions  Changing the axes in an axes group can be			functions for single-axis	Enabling external latches	The position of an axis is recorded when a trigger occurs.
Motion control  Resetting the following error positions of two specified area genome.  Resetting the following error positions of two specified axes exceeds a threshold value.  The error between the command current position and actual current positions of two specified axes exceeds a threshold value.  The error between the command current position and actual current positions is set to o.  Torque limit The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output lorque.  Command position compensation  Start velocity  You can set the initial velocity when axis motion starts.  Absolute linear interpolation  Absolute linear interpolation  Accordinated control  Accordinated control  Accordinated control  Accordinated control  Auxiliary functions for multi-axes coordinated control  Auxiliary functions for multi-axes coordinated control  Auxiliary functions for multi-axes coordinated control  Accordinated control  Auxiliary functions for multi-axes coordinated control  Auxiliary functions for multi-axes group errors  Enabling axes groups  Motion of an axes group is disabled.  All axes in interpolated motion are decelerated to a stop.  Immediately stopping axes groups  All axes in interpolated motion are stopped immediately.  The bended target velocity is changed during interpolated motion.  The companion and actual current positions of an axes group group can be read.  The companion and actual current positions of an axes group can be read.  The companion area for the axis specified avoid the input parameter is avend in non-volatile memory in the CPU Linut.  Generat				Disabling external latches	The current latch is disabled.
Motion control				Zone monitoring	
Monitoring axis following error   Propositions of two specified axes exceeds a threshold value.				Enabling digital cam switches	You can turn a digital output ON and OFF according to the position of an axis.
Resetting the following error   The error between the command current position and actual current position is set to 0.   Torque limit   The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.   The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the output torque.   The torque control function of the volt of the output torque.   The torque control function of the set to control the output torque.   The torque control function which compensate the position for the axis in operation.	Matian				You can monitor whether the difference between the command positions or actual
Axes groups  Axes groups  Axiliary function for multi-axes coordinated control  Common items  Common items  Torque limit  The torque control function of the Servo Drive can be enabled or disabled and the torque limits can be set to control the upont torque.  The function which compensate the position for the axis in operation.  The function which compensate the position for the axis in operation.  You can set the initial velocity when axis motion starts.  Linear interpolation is performed to a specified absolute position.  Circular 2D interpolation  Circular 2D interpolation  Circular interpolation is performed to a specified relative position.  Circular 2D interpolation  Axes group cyclic synchronous absolute positioning command is output each control period in Position Control Mode.  Assignoup axes group perrors  Axes group errors and axis errors are cleared.  Enabling axes groups  Motion of an axes group is disabled.  Stopping axes groups  All axes in interpolated motion are decelerated to a stop.  Immediately stopping axes groups  All axes in interpolated motion are stopped immediately.  Setting axes group positions  Changing the axes in an axes group are read.  The blended target velocity is changed during interpolated motion.  The command current positions and actual current positions of an axes group are read.  The Composition Axes parameter in the axes group parameters can be overwritten temporarily.  Cams  Cams  Cams  Setting cam table properties  Saving cam tables  The cam table that is specified with the input parameter is generated from the cam property and cam node.  Writing MC settings  Writing MC settings  Writing Scoperior and axis errors are cleared.  Apositioning command is output each control period in Position.  Circular 1D interpolation is performed to a specified with the input parameter is saved in nonvolatile memory in the CPU Unit.  The cam table that is specified with the input parameter is generated from the cam property and cam node.				Resetting the following error	The error between the command current position and actual current
Axes groups  Axes groups  Auxiliary functions for multi-axes coordinated control  Axes groups  Auxiliary functions for multi-axes coordinated control  Axes groups  Auxiliary functions for multi-axes coordinated control  Axes group cyclic synchronous absolute positioning  Axes group cyclic synchronous absolute positioning command is output each control period in Position Control Mode.  Axes group errors and axis errors are cleared.  Auxiliary functions for multi-axes coordinated control  Stopping axes groups  All axes in interpolated motion are decelerated to a stop.  Immediately stopping axes group override factors  All axes in interpolated motion are stopped immediately.  All axes in interpolated motion are stopped immediately or the command current positions and actual current positions of an axes group parameter in the command current positions and actual current positions of an axes group are read.  Cams  Cams  Cams  Cams  Cams  Are functionary in the function is performed to a specified with the input parameter is changed.  The cam table that is specified with the input parameter is gen				Torque limit	The torque control function of the Servo Drive can be enabled or disabled and the
Axes groups  Axes groups  Auxiliary functions for multi-axes coordinated control  Control  Auxiliary functions for multi-axes coordinated control  Control  Common items  Common items  Axes groups  Axes group cyclic synchronous absolute positioning  Axes group cyclic synchronous absolute positioning  Axes group cyclic synchronous absolute positioning  Axes group cyclic synchronous absolute positioning command is output each control period in Position Control Mode.  Axes group cyclic synchronous absolute positioning command is output each control period in Position Control Mode.  Axes group cyclic synchronous absolute positioning command is output each control period in Position Control Mode.  Axes group cyclic synchronous absolute positioning command is output each control period in Position Control Mode.  Axes group cyclic synchronous absolute positioning command is output each control period in Position Control Mode.  Axes group cyclic synchronous absolute positioning command is output each control period in Position Control Mode.  Axes group errors and axis errors are cleared.  Axes group is enabled.  Stopping axes groups  Motion of an axes group is disabled.  Stopping axes groups  All axes in interpolated motion are decelerated to a stop.  All axes in interpolated motion are stopped immediately.  The blended target velocity is changed during interpolated motion.  The command current positions and actual current positions of an axes group can be read.  The command current positions and actual current positions of an axes group and the read to stop and actual current positions.  The composition Axes parameter in the axes group parameters can be overwritten temporarily.  The cam table that is specified with the input parameter is saved in nonvolation memory in the CPU Unit.  The cam table that is specified with the input parameter is generated from the cam property and cam node.  Writing MC settings  Apositioning command to apperdence and axis group and axes group parameters are overwritten temporarily.				Command position compensation	<u> </u>
Axes groups  Axes groups  Axes groups  Auxiliary functions for multi-axes coordinated control  Accontrol  Axes groups  Auxiliary functions for multi-axes coordinated control  Axes groups  Cams  Cams  Cams  Axes group cyclic axes group errors  Cams  Axes group explic axes group errors  Axes group errors and axis errors are cleared.  Circular interpolation is performed to a specified relative position.  Circular interpolation is performed for two axes.  A positioning command is output each control period in Position Control Mode.  Axes group errors and axis errors are cleared.  Enabling axes groups  Motion of an axes group is enabled.  Stopping axes groups  All axes in interpolated motion are decelerated to a stop.  Immediately stopping axes groups  Setting axes group positions  Changing the axes in an axes group are read.  Cams  Cams  Cams  Cams  Cams  Axes group errors  Axes group errors and axis errors are cleared.  At positioning command is output each control period in Position Control Mode.  Axes group errors and axis errors are cleared.  At positioning command is output each control period in Position Control Mode.  Axes group errors and axis errors are cleared.  At positioning command is output each control period in Position Control Mode.  At positioning command is output each control period in Position Control Mode.  At positioning command is output each control period in Position Control Mode.  At positioning command is output each control period in Position Control Mode.  At positioning command is output each control period in Position Control Mode.  At positioning command is output each control period in Position Control Mode.  At positioning command is output each control period in Position Control Mode.  At positioning command is output each control period in Position Ontrol Mode.  At positioning command is output each control ontrol period in Position Ontrol Mode.  At positioning command is output each control ontrol period in Position Ontrol Mode.  At positioning command is output each control on				•	
Axes groups  Auxiliary functions for multi-axes coordinated control  Auxiliary functions for multi-axes coordinated control  Auxiliary functions for multi-axes coordinated control  Axes group cyclic synchronous absolute positioning  Auxiliary functions for multi-axes coordinated control  Auxiliary functions for multi-axes coordinated control  Axes group errors  Auxiliary functions for multi-axes coordinated control  Axes group errors  Auxiliary functions for multi-axes coordinated control  Axes group errors  Axes group errors and axis errors are cleared.  Axes group is disabled.  All axes in interpolated motion are decelerated to a stop. Immediately stopping axes groups  All axes in interpolated motion are stopped immediately.  The belended target velocity is changed during interpolated motion.  The command current positions and actual current positions of an axes group can be read.  Changing the axes in an axes group errors are cleared.  The compand of an axes group is disabled.  The command current position are stopped immediately.  The command current positions and actual current positions of an axes group can be read.  The Composition Axes parameter in the axes group parameters can be overwritten temporarily.  Cams  Cams  Cams  Cams  Cams  Cams  Cams  Cams  Cams  Cam table properties  Falling axes group positions  The cam table that is specified with the input parameter is generated from the cam property and cam node.  The cam table that is specified with the input parameter is generated from the cam property and cam node.  Writing MC settings  Writing MC settings  Common items  Axes group portrors  Apositioning command is output each control provide and interpolation of an axes group is disabled.  At axes group errors and axis errors are cleared.  At axes group sendled.  At axes group errors and axis errors are cleare				•	,
Axes groups  Axes groups  Axes group cyclic synchronous absolute positioning  Axes group cyclic synchronous absolute positioning  Axes group errors  Axes group errors  Axes group errors  Enabling axes groups  Motion of an axes group is enabled.  Stopping axes groups  All axes in interpolated motion are decelerated to a stop.  Immediately stopping axes group override factors  Reading axes group positions  Changing the axes in an axes group error.  Cams  Cams  Cams  Cams  Cams  Circular 2D interpolation  Circular interpolation is performed for two axes.  A positioning command is output each control period in Position Control Mode.  A positioning command is output each control period in Position Control Mode.  Axes group errors and axis errors are cleared.  Axes group is enabled.  Stopping axes groups  All axes in interpolated motion are decelerated to a stop.  Immediately stopping axes group override factors  The blended target velocity is changed during interpolated motion.  The command current positions and actual current positions of an axes group are read.  Changing the axes in an axes group errors  The Composition Axes parameter in the axes group parameters can be overwritten temporarily.  The end point index of the cam table that is specified with the input parameter is saved in nonvolatile memory in the CPU Unit.  Generating cam tables  The cam table that is specified with the input parameter is generated from the cam property and cam node.  Some of the axis parameters or axes group parameters are overwritten temporarily.			coordinated	•	
Axes group cyclic synchronous absolute positioning command is output each control period in Position Control Mode.  Axes groups  Axes group errors  Axes group errors and axis errors are cleared.  Enabling axes groups  Motion of an axes group is enabled.  Disabling axes groups  Motion of an axes group is disabled.  Stopping axes groups  All axes in interpolated motion are decelerated to a stop.  Immediately stopping axes groups  Setting axes group override factors  Reading axes group positions  Changing the axes in an axes group can be read.  Changing the axes in an axes group arameter in the axes group parameters can be overwritten temporarily.  Common items  Common items  A positioning command is output each control period in Position Control Mode.  Axes group errors and axis errors are cleared.  Axes group errors and axis errors are cleared.  Axes group is enabled.  At axes in interpolated motion are decelerated to a stop.  Ilmediately stopping axes groups  All axes in interpolated motion are stopped immediately.  The command current positions and actual current positions of an axes group can be read.  The Composition Axes parameter in the axes group parameters can be overwritten temporarily.  The end point index of the cam table that is specified with the input parameter is saved in non-volatile memory in the CPU Unit.  Generating cam tables  The cam table that is specified with the input parameter is generated from the cam property and cam node.  Writing MC settings  Writing MC settings  Some of the axis parameters or axes group parameters are overwritten temporarily.				· ·	
Axes groups  Auxiliary functions for multi-axes coordinated control  Common items  Axes groups  Common items  Axes groups  Axes group errors and axis errors are cleared.  Enabling axes groups  Motion of an axes group is enabled.  Disabling axes groups  Motion of an axes group is disabled.  Stopping axes groups  All axes in interpolated motion are decelerated to a stop.  Immediately stopping axes groups  All axes in interpolated motion are stopped immediately.  Setting axes group override factors  The blended target velocity is changed during interpolated motion.  The command current positions and actual current positions of an axes group can be read.  Changing the axes in an axes group can be read.  Changing the axes in an axes group overrite the portion of the cam table that is specified with the input parameter is saved in nonvolatile memory in the CPU Unit.  Generating cam tables  Writing MC settings  Axes group errors and axis errors are cleared.  Axes group is enabled.  At axes in interpolated motion are stopped immediately.  All axes in interpolated motion are stopped immediately.  The command current positions and actual current positions of an axes group can be read.  The Composition Axes parameter in the axes group parameters can be overwritten temporarily.  The end point index of the cam table that is specified with the input parameter is saved in nonvolatile memory in the CPU Unit.  Generating cam tables  The cam table that is specified with the input parameter is generated from the cam property and cam node.  Writing MC settings  Some of the axis parameters or axes group parameters are overwritten temporarily.				-	Circular interpolation is performed for two axes.
Axes groups  Auxiliary functions for multi-axes coordinated control  Cams  Resetting axes group errors  Auxiliary functions for multi-axes coordinated control  Cams  Reading axes group positions  Cams  Resetting axes group in Motion of an axes group is enabled.  Motion of an axes group is disabled.  All axes in interpolated motion are decelerated to a stop.  Immediately stopping axes groups  All axes in interpolated motion are stopped immediately.  All axes in interpolated motion are stopped immediately.  The blended target velocity is changed during interpolated motion.  The command current positions and actual current positions of an axes group can be read.  The Composition Axes parameter in the axes group parameters can be overwritten temporarily.  The eam table that is specified with the input parameter is saved in nonvolatile memory in the CPU Unit.  Generating cam tables  Writing MC settings  Axes group errors and axis errors are cleared.  Motion of an axes group is disabled.  All axes in interpolated motion are stopped immediately.  The command current positions and actual current positions of an axes group can be read.  The Composition Axes parameter in the axes group parameters can be overwritten temporarily.  The cam table that is specified with the input parameter is saved in nonvolatile memory in the CPU Unit.  Generating cam tables  Writing MC settings  Writing MC settings  Axes group example and axes group is disabled.  All axes in interpolated motion are decelerated to a stop.  All axes in interpolated motion are decelerated to a stop.  All axes in interpolated motion are decelerated to a stop.  All axes in interpolated motion are decelerated to a stop.  The command current positions and actual current positions of an axes group can be read.  The command current positions and actual current positions of an axes group can be read.  The command current positions and actual current pos				synchronous absolute	l saint
Axes groups  Auxiliary functions for multi-axes coordinated control  Common items  Auxiliary functions for multi-axes coordinated control  Common items  Auxiliary functions for multi-axes coordinated control  Auxiliary functions for multi-axes coordinated control  Enabling axes groups  All axes in interpolated motion are decelerated to a stop.  All axes in interpolated motion are stopped immediately.  All axes in interpolated motion are stopped immediately.  The blended target velocity is changed during interpolated motion.  The command current positions and actual current positions of an axes group can be read.  Changing the axes in an axes group override factors  The Composition Axes parameter in the axes group parameters can be overwritten temporarily.  Setting cam table properties  Saving cam table properties  The cam table that is specified with the input parameter is saved in non-volatile memory in the CPU Unit.  The cam table that is specified with the input parameter is generated from the cam property and cam node.  Writing MC settings  Writing MC settings  Motion of an axes group is disabled.  All axes in interpolated motion are decelerated to a stop.  All axes in interpolated motion are decelerated to a stop.  All axes in interpolated motion are decelerated to a stop.  All axes in interpolated motion are decelerated to a stop.  All axes in interpolated motion are decelerated to a stop.  All axes in interpolated motion are decelerated to a stop.  The command current positions and actual current positions of an axes group parameters can be overwritten temporarily.				<u> </u>	Axes group errors and axis errors are cleared.
Auxiliary functions for multi-axes coordinated control  Auxiliary functions for multi-axes coordinated control  Auxiliary functions for multi-axes coordinated control  All axes in interpolated motion are decelerated to a stop.  Immediately stopping axes groups  All axes in interpolated motion are stopped immediately.  The blended target velocity is changed during interpolated motion.  Reading axes group positions  Changing the axes in an axes group can be read.  The Composition Axes parameter in the axes group parameters can be overwritten temporarily.  Cams  Cams  Cams  Cams  Cams  Cams  Cams  Disabling axes groups  All axes in interpolated motion are stopped immediately.  The command current positions and actual current positions of an axes group can be read.  The Composition Axes parameter in the axes group parameters can be overwritten temporarily.  The end point index of the cam table that is specified with the input parameter is changed.  The cam table that is specified with the input parameter is saved in non-volatile memory in the CPU Unit.  The cam table that is specified with the input parameter is generated from the cam property and cam node.  Some of the axis parameters or axes group parameters are overwritten temporarily.				• • •	3 1
Auxiliary functions for multi-axes coordinated control    Stopping axes groups   All axes in interpolated motion are decelerated to a stop.		Avec 6			<u> </u>
Common items   Comm		Axes groups			· .
Common items   Generating cam tables   Parameters   Good control   Parameters   Generating MC settings   All axes in interpolated motion are stopped immediately.   The blended target velocity is changed during interpolated motion.    The blended target velocity is changed during interpolated motion.    The command current positions and actual current positions of an axes group can be read.   The Composition Axes parameter in the axes group parameters can be overwritten temporarily.   The end point index of the cam table that is specified in the input parameter is saved in nonvolatile memory in the CPU Unit.   The cam table that is specified with the input parameter is generated from the cam property and cam node.   Some of the axis parameters or axes group parameters are overwritten temporarily.					
Common items  Factors  In blended target velocity is changed during interpolated motion.  The command current positions and actual current positions of an axes group can be read.  The Composition Axes parameter in the axes group parameters can be overwritten temporarily.  Setting cam table properties  Cams  Cam			multi-axes	groups	All axes in interpolated motion are stopped immediately.
Cams  Changing the axes in an axes group positions  Changing the axes in an axes group position Axes parameter in the axes group parameters can be overwritten temporarily.  The end point index of the cam table that is specified in the input parameter is changed.  Saving cam tables  The cam table that is specified with the input parameter is saved in non-volatile memory in the CPU Unit.  Generating cam tables  The cam table that is specified with the input parameter is generated from the cam property and cam node.  Writing MC settings  Some of the axis parameters or axes group parameters are overwritten temporarily.					0 , 0 0 1
Cams  Common items  Cams  Setting cam table properties  Cams  Saving cam tables  Common items  Commo				Reading axes group positions	
Common items  Cams  Saving cam tables  Common items  Common items  Cams  Saving cam tables  Common items  Common i					
Common items  Co				Setting cam table properties	
Parameters  Writing MC settings  the cam property and cam node.  Some of the axis parameters or axes group parameters are overwritten temporarily.			Cams	Saving cam tables	
Parameters temporarily.		Common items		Generating cam tables	
Changing axis parameters You can access and change the axis parameters from the user program.			Parameters	Writing MC settings	
				Changing axis parameters	You can access and change the axis parameters from the user program.

		Item		NY5□□-1/NY5□□-5
		Count modes		You can select either Linear Mode (finite length) or Rotary Mode (infinite length).
		Unit conversions		You can set the display unit for each axis according to the machine.
		Acceleration/	Automatic acceleration/ deceleration control	Jerk is set for the acceleration/deceleration curve for an axis motion or axes group motion.
		deceleration control	Changing the acceleration and deceleration rates	You can change the acceleration or deceleration rate even during acceleration or deceleration.
		In-position check	k	You can set an in-position range and in-position check time to confirm when positioning is completed.
		Stop method		You can set the stop method to the immediate stop input signal or limit input signal.
		Re-execution of	motion control instructions	You can change the input variables for a motion control instruction durin execution and execute the instruction again to change the target value during operation.
Motion	Auxiliary functions	Multi-execution ( (Buffer mode)	of motion control instructions	You can specify when to start execution and how to connect the velocitie between operations when another motion control instruction is execute during operation.
control		Continuous axes		You can specify the Transition Mode for multi-execution of instructions f axes group operation.
		(Transition mode	Software limits	Software limits are set for each axis.
			Following error	The error between the command current value and the actual current value is monitored for an axis.
		Monitoring	Velocity, acceleration rate,	
		functions	deceleration rate, torque, interpolation velocity, interpolation acceleration rate, and interpolation deceleration rate	You can set and monitor warning values for each axis and each axes group.
		Absolute encoder support		You can use an OMRON 1S-series Servomotor or G5-Series Servomotor with an Absolute Encoder to eliminate the need to perform homing at starts
		Input signal logic inversion		You can inverse the logic of immediate stop input signal, positive limit input signal, negative limit input signal, or home proximity input signal.
	External interfac	e signals	The Servo Drive input signals listed on the right are used.	Home signal, home proximity signal, positive limit signal, negative limit signal, immediate stop signal, and interrupt input signal.
Jnit (I/O) nanagement	EtherCAT slaves	Maximum numbe	er of slaves	192
		Communications	protocol	TCP/IP, UDP/IP
	Built-in	TCP/IP functions	CIDR	The function which performs IP address allocations without using a cla (class A to C) of IP address.
			IP Forwarding	The function which forward IP packets between interfaces.
			Packet Filter *2	Check the IP packet, the function to determine whether to receive the source IP address and TCP port number.
			NAT	Function for transfer by converting the two IP address.
		nerNet/IP port   communications	Tag data links	Programless cyclic data exchange is performed with the devices on th EtherNet/IP network.
	Internal Port		Message communications	CIP commands are sent to or received from the devices on the EtherNet/IP network
			Socket services	Data is sent to and received from any node on Ethernet using the UDP or TCP protocol Socket communications instructions are used.
		TCP/IP	FTP client	File can be read from or written to computers at other Ethernet nodes fron the CPU Unit. FTP client communications instructions are used.
		applications	FTP server	Files can be read from or written to the SD Memory Card in the CPU Ur from computers at other Ethernet nodes.
			SNMP agent	Built-in EtherNet/IP port internal status information is provided to netwo management software that uses an SNMP manager.
Communications		Supported	Process data communications	A communications method to exchange control information in cyclic communications between the EtherCAT master and slaves. This communications method is defined by CoE.
		services	SDO communications	A communications method to exchange control information in noncyclic ever communications between EtherCAT master and slaves. This communications method is defined by CoE.
		Network scannin	g	Information is read from connected slave devices and the slave configuration is automatically generated.
	EtherCAT port	DC (distributed o	clock)	Time is synchronized by sharing the EtherCAT system time among all EtherCAT devices (including the master).
		Packet monitoring	ng	The frames that are sent by the master and the frames that are receive by the master can be saved. The data that is saved can be viewed with WireShark or other applications.
		Enable/disable s	ettings for slaves	The slaves can be enabled or disabled as communications targets.
		Disconnecting/co	onnecting slaves	Temporarily disconnects a slave from the EtherCAT network for maintenance such as for replacement of the slave, and then connects the slave again.
		Supported application protocol	СоЕ	SDO messages of the CAN application can be sent to slaves via EtherCAT.
	Communications	sinstructions		The following instructions are supported. CIP communications instructions, socket communications instructions, SDO messa instructions, FTP client instructions, and Modbus RTU protool instructions.

<sup>\*2.</sup> Internal Port only.

		Item		NY5□□-1/NY5□□-5
	Function			Events are recorded in the logs.
System	Event less	Maximum	System event log	2,048
management	Event logs	number of	Access event log	1,024
		events	User-defined event log	1,024
	Online editing	Single		Programs, function blocks, functions, and global variables can be changed online. Different operators can change different POUs across a network.
	Forced refreshin	g		The user can force specific variables to TRUE or FALSE.
		Maximum	D	'
		number of forced variables for EtherCAT slaves		64
	MC test run	1		Motor operation and wiring can be checked from the Sysmac Studio.
	Synchronizing			The project file in the Sysmac Studio and the data in the CPU Unit can be made the same when online.
	Differentiation m	onitoring		Rising/falling edge of contacts can be monitored.
		Maximum numbe	er of contacts	8
		_	Single triggered trace	When the trigger condition is met, the specified number of samples are taken and then tracing stops automatically.
Debugging		Types	Continuous trace	Data tracing is executed continuously and the trace data is collected by the Sysmac Studio.
		Maximum numbe	er of simultaneous data trace	4
		Maximum numbe		10,000
		Sampling	Maximum number of sampled variables	192 variables
	Data tracing			Sampling is performed for the specified task period, at the specified time
	Data tracing	Timing of sampli	ng	or when a sampling instruction is executed.
		Triggered traces		Trigger conditions are set to record data before and after an event.
				When BOOL variable changes to TRUE or FALSE Comparison of non-
			Trigger conditions	BOOL variable with a constant Comparison Method: Equals (=), Greater than (>), Greater than or equals (≥), Less Than (<), Less than or equals (≤), Not equal (≠)
			Delay	Trigger position setting: A slider is used to set the percentage of sampling before and after the trigger condition is met.
	Simulation	+		The operation of the CPU Unit is emulated in the Sysmac Studio.
		Controller errors	Levels	Major fault, partial fault, minor fault, observation, and information
Reliability functions	Self-diagnosis	User-defined erro	ors	User-defined errors are registered in advance and then records are created by executing instructions.
			Levels	8 levels
	Protecting software assets and preventing	CPU unit names	and serial IDs	When going online to a CPU Unit from the Sysmac Studio, the CPU Unit name in the project is compared to the name of the CPU Unit being connected to.
			User program transfer with no restoration information	You can prevent reading data in the CPU Unit from the Sysmac Studio.
		Protection	CPU unit write protection	You can prevent writing data to the CPU Unit from the Sysmac Studio o SD Memory Card.
Security			Overall project file protection	You can use passwords to protect .smc files from unauthorized opening on the Sysmac Studio.
	operating mistakes		Data protection	You can use passwords to protect POUs on the Sysmac Studio.
		Verification of op	peration authority	Online operations can be restricted by operation rights to prevent damage to equipment or injuries that may be caused by operating mistakes.
			Number of groups	5
		Verification of user program execution ID		The user program cannot be executed without entering a user program execution ID from the Sysmac Studio for the specific hardware (CPU Unit).
	Location to store			Shared folder: The folder that exist on the HDD / SDD that Windows is running.
Momente		Memory card ope	eration instructions	You can access Memory Cards from instructions in the user program.
Memory card functions	Application	File operations fr	rom the Sysmac Studio	You can perform file operations for Controller files in the Memory Card and read/write general-purpose document files on the computer.
		File operations for	rom FTP Client/Server	You can store and read files by the FTP client function and FTP server function.
			Using system-defined variables	You can use system-defined variables to backup or compare data.
D. d.	SD memory card backup	Operation	Memory card operations dialog box on Sysmac Studio	Backup and verification operations can be performed from the SD Memory Card Operations Dialog Box on the Sysmac Studio.
Backup functions	functions		Using instruction	Backup operation can be performed by using instruction.
.anouona		Protection	Prohibiting backing up data to the SD memory card	Prohibit SD Memory Card backup functions.
	Syemac Studio o	ontroller backup f	unctions	Backup, restore, and verification operations for Units can be performed from the Sysmac Studio.

Functions Supported by NY5 $\square$ -5 Besides functions of the NY5 $\square$ -1, functions supported by the NY5 $\square$ -5 are as follows.

		Ite	em		NY532-
					5400
		Axes types	Decitioning svic		Positioning axis, Spindle axis
		Control modes	Positioning axis Spindle axis		Position control
			Spiridle axis		Velocity control  Absolute position (command), absolute position (actual), program
		Positions that can	be managed		position, remaining travel distance.
			Execute		Executes the NC program.
		Reset		Interrupt NC program.	
			Single step exec	ution	Executes the NC program by block.
			Back trace		Executes back trace of interpolation pass.
			Feed hold / Feed	hold reset	Temporarily stops the NC program, and restarts it.
		NC program	Optional stop		Stops the NC program with optional signal.
		execution	Optional block s	top	Skips one block of the NC program with optional signal.
			Dry run		Runs operation from the NC program.
			Machine lock		Locks each axis operation during execution of the NC program.
			Auxiliary lock		Locks M code output.
			Override		Overrides the feed rate and spindle velocity.
			0.00	Rapid Positioning	Rapid feed of each CNC motor according to the motor setting.
				Linear interpolation	Interpolates linearly.
			Position control	Circular interpolation	Interpolates intearry.  Interpolates circularly, helically, spirally, or conically.
				Skip function	Rapid feed until an external signal is input.
			Return to referen	•	Returns to a specified position on the machine.
			Canned cycle	Rigid tap	Performs tapping machining.
			Carmed Cycle	τιισια ταρ	Temporarily prevents blending of positioning operations before
				Exact stop	and after an exact stop direction.  Mode in which anteroposterior positioning operations are not
		Feed function	Exact stop mode	blended.	
			Continuous-path mode	Mode in which anteroposterior positioning operations are blended	
				Dwell	Waits for the specified period of time.
Numerical	CNC coordinate	G Code	Coordinata	Machine Coordinate System	The coordinate system uses the machine home position as the home of the system.
Control	system	5	Coordinate system selection	Work Coordinate System	The coordinate system has work offset for the Machine Coordinate System.
				Local Coordinate System	The coordinate system has additional offset for the Work Coordinate System.
				Absolute/relative selection	Specifies manipulated variable absolutely, or switches to the relative setting.
			Auxiliary for coordinate system	Metric/inch selection	Selects metric or inch as the orthogonal axes unit system.
				Scaling	Scales the current coordinates of the orthogonal axes.
				Mirroring	Mirrors the current coordinates for the specified orthogonal axes.
				Rotation	Rotate the current coordinates around the coordinates of the specified axis.
				Cutter compensation	Compensation of the tool edge path according to the tool radius.
			Tool functions	Tool length compensation	Compensation of tool center point path according to the tool length.
			M code/M code r	eset	Outputs M codes, and interlocks with sequence control program using reset.
		M code		CW/CCW/Stop	Outputs/stops velocity commands in velocity loop control mode.
		w code	Spindle axis	Orientation	Stops spindle axis to the specified phase by setting up feed back loop.
			Subroutine call		Calls a subroutine of the NC program.
			Arithmetic opera	tion	Performs a calculation in the NC program.
			Branch control		Branches on condition in the NC program.
		User variables		Memory area in the NC program used for processing such as data calculation.	
		NC programming		P variable	System global memory area common to CNC coordinate systems
				Q variable	Global system area unique to each CNC coordinate system.
				L variable	Memory area that can be used as the primary area during execution of the NC program.
		Auxiliary control	Error reset		Function that resets errors or CNC coordinate system and CNC motor.
		functions	Immediate stop		Function that stops all the CNC motors of the CNC coordinate system.

					NY532-	
		Ite	em		5400	
		Positions that can	be managed		Commanded positions and actual positions.	
			Absolute position	ning	Positioning is performed for a target position that is specified using an absolute value.	
		Position control	Relative position	ing	Positioning is performed for a specified travel distance from the command current position.	
			Cyclic positionin	g	A commanded position is output at each control period in Position Control Mode.	
		Spindle control	CW/CCW/Stop		Outputs/stops velocity commands in velocity loop control mode.	
		Manual operation	Powering the Ser	rvo	The Servo in the servo driver is turned ON to enable CNC motor operation.	
			Jogging		A CNC motor is jogged at a specified target velocity.	
		Auxiliary control functions	Homing		A CNC motor is operated, and the limit signals, home proximity signal, and home signal are used to define home.	
		Tutictions	Immediate stop		A CNC motor is stopped immediately.	
		CNC motor	Ball screw compensation		Pitch error compensation for one-dimensional ball screw.	
		compensation table	Cross-axis compensation		Compensation of one-dimensional cross-axis.	
		Auxiliary control functions	Homing		A CNC motor is operated, and the limit signals, home proximity signal, and home signal are used to define home.	
Numerical	CNC motor	Turictions	Immediate stop		A CNC motor is stopped immediately.	
Control		CNC motor	Ball screw compensation		Pitch error compensation for one-dimensional ball screw.	
		compensation table	Cross-axis compensation		Compensation of one-dimensional cross-axis.	
			Editing the CNC motor compensation table		Edit using sequence control program (Read/write).	
			In-position check		You can set an in-position range and in-position check time to confirm when positioning is completed.	
			Stop method		You can set the stop method to the immediate stop input signal or limit input signal.	
			Monitoring	Software limits	Monitors the movement range of a CNC motor.	
		Auxiliary functions	functions	Following error	Monitors the error between the command current value and the actual current value for a CNC motor.	
			Absolute encode	er support	You can use an OMRON 1S-series Servomotor or G5-series Servomotor with an Absolute Encoder to eliminate the need to perform homing at startup.	
			Input signal logic inversion		You can inverse the logic of immediate stop input signal, positive limit input signal, negative limit input signal, or home proximity input signal.	
		External interface	signals		The Servo Drive input signals listed on the right are used. Home signal, home proximity signal, positive limit signal, negative limit signal, immediate stop signal, and interrupt input signal.	
	Common items	Parameters	Changing CNC co	oordinate system and CNC	You can access and change the CNC coordinate system and CNC motor parameters from the user program.	

### **Performance Specifications**

	Ite	m		NY5□□-1/NY5□□-5	
		CPU type		Intel <sup>®</sup> Core <sup>™</sup> i7-4700EQ	
		Cores / Threa	ıds	4/8	
	0011	CPU base fre	quency	2.4 GHz	
	CPU	Maximum tur	bo frequency	3.4 GHz	
		Cache	<u> </u>	6 MB	
		Cooling detail	ils	Requires active cooling (fan)	
Main system		Memory size		8 GB	
Main System	Memory	Memory type		DDR3L (non ECC)	
	Trusted platfor	m module (TPN		Ensure the integrity of the platform     Disk encryption     Password protection and other uses of encryption	
				Intel® HD Graphics. Up to two independent screens.	
	Graphics contr	oller		Intel® HD Graphics 4600	
	Watchdog			Yes	
Operating system	Windows OS			Windows Embedded Standard 7 - 32 bit ≯1 Windows Embedded Standard 7 - 64 bit	
		Hard disk dri	ve	• 320 GB Serial ATA 3.0	
Storage devices	Drives	Solid state	SLC type	32 GB and 64 GB Serial ATA 3.1	
		drive	MLC type	• 128 GB Serial ATA 3.1	
	Drive bay (HDD/SSD) *2			2	
	Power connect	tor		• 24 VDC	
	I/O connector			2 inputs (Power ON/OFF Input and UPS Mode Input) and 1 output (Power Status Output)	
	Number of ports		orts	2	
	USB 2.0 Type-A	Maximum current		500 mA	
		Maximum cable length		5 m	
	Number of p		orts	2	
Connectors	USB 3.0 Type-A	Maximum current		900 mA	
		Maximum cable length		3 m	
	Ethernet	Number of av	ailable ports	3	
	connectors	Physical layer		10BASE-T, 100BASE-TX or 1000BASE-T	
		Video interface		Digital or analog	
	DVI-I connector	Resolution		Up to 1,920 x 1,200 pixels at 60 Hz	
		Maximum DVI cable length		Dependent upon connected monitor type and resolution	
	RS-232C			Standard DSUB9 connector (Non-Isolated)	
		Video interfa	ce	Digital only	
	DVI-D	Resolution		Up to 1,920 x 1,200 pixels at 60 Hz	
		Maximum DV	I cable length	Dependent upon connected monitor type and resolution	
Optional connector (select		Video interfa	ce	Digital only	
one per system)		Resolution		1,280 x 800 pixels at 60 Hz	
	NY Monitor	Connector ty	ре	RJ45	
	Link	Cable shieldi max. length	ng, type and	S/FTP, Cat.6A, 100 m	
		USB data thre	oughput	280 Mbps max.	
	Configuration			X4 (4 lanes) up to Gen 3	
PCIe Card Slot	Card height			Standard height cards, 4.20 inches (106.7 mm) *3	
	Card length			Half length cards, 6.6 inches (167.65 mm)	
Rattery	Model			CJ1W-BAT01	
Battery	Service life			5 years at 25°C	
Ean unit	Model			NY000-AF00	
Fan unit	Service life			70,000 hours of continuous operation at 40°C with 15% to 65% relative humidity	
				PWR, ERR, HDD, RUN	

<sup>\*1.</sup> For the 32 bit version, consult your OMRON sales representative.
\*2. Depending on the model one or two drives are supported.
\*3. Low profile cards, 2.536 inches (64.4 mm) are not supported.

### **Display Specifications**

	ltem -		Speci	Specifications		
		item	12.1 Inch models	15.4 Inch models		
		Display device	TFT LCD			
		Screen size	12.1 inches	15.4 inches		
		Surface treatment	Anti glare treatment			
		Surface hardness	Mohs scale: 5 - 6			
	Display panel	Resolution	1,280 X 800 pixels at 60 Hz (horizontal X ve	rtical)		
	*1	Colors	16,770,000 colors			
		Effective display area	261 × 163 mm (horizontal × vertical)	331 × 207 mm (horizontal × vertical)		
Diamlass		View angles	Left: 60°, Right: 60°, Top: 60°, Bottom: 60°			
Display		Life	50,000 hours min. <b>*</b> 2			
		Brightness adjustment	200 levels *3			
		Technology	Projected capacitive			
		Touch resolution	Touch accuracy 1.5% (4-5 mm)			
	Touch	Multitouch	Up to 5 simultaneous touches			
	Toucil	Features	Water detection *4, hand palm rejection *5	, gloves <b>*</b> 6		
		Life	50,000,000 operations min.			
		EMC	Correct touchscreen operation is possible w	Correct touchscreen operation is possible within allowable EMC immunity conditions		

Note: Industrial Panel PC type only.

- \*1. There may be some defective pixels in the display. This is not a fault as long as the numbers of defective light and dark pixels fall within the following standard range: light and dark pixels 10 or less. (There must not be 3 consecutive light/dark pixels.) \*2. This is the estimated time before brightness is reduced by half at room temperature and humidity.
- The life expectancy is drastically shortened if used at high temperatures.
- \*3. If the brightness is set to very dark, it causes flickering or the screen will be too dark to use.
- **\*4.** If water is detected the touch functionality will not be available.
- **\*5.** If a palm is detected that specific area is neglected.
- **\*6.** The touchscreen can be operated when wearing gloves. Check correct usage of the gloves before using them.

### **Electrical Specifications**

Item		Industrial Box PC type	Industrial Panel PC type			
	пеш		NY51□	NY53□-1	NY53□-5	
Rated power supply voltage			24 VDC, non-isolated	24 VDC, non-isolated		
Allowable power supply	voltage rang	9	20.4 to 28.8 VDC			
Grounding method			Ground to less than 100 $\Omega$			
Inrush current			At 24 VDC: 12 A / 6 ms max. for	cold start at room temperature		
Overvoltage category			JIS B3502 and IEC 61131-2: Ca	tegory II		
EMC immunity level			IEC 61131-2: Zone B			
RTC accuracy		At ambient temperature of 25°C:	At ambient temperature of 55°C: -3.5 to +0.5 min error per month At ambient temperature of 25°C: -1.5 to +1.5 min error per month At ambient temperature of 0°C: -3 to +1 min error per month			
Power button life			100,000 operations			
Battery life			5 years at 25°C (for battery CJ1W-BAT01)			
Fan life			8 years of continuous operation at 40°C			
Maximum power consun including drives and exp Maximum power consun excluding drives and expansions			114 W	132 W		
			81 W	99 W		
Power consumption *		HDD 320 GB	2 W –			
i onoi conodinption v	Drives	SSD SLC 32 GB	2 W			
	Drives	SSD SLC 64 GB	2 W			
		SSD MLC 128 GB	2 W			
	USB	USB	14 W max. ((2 x 500 mA at 5 V) + (2 x 900 mA at 5 V))			
	Expansions PCIe		15 W max.			

series IPC Machine Controller Industrial Panel PC Hardware User's Manual (W557) or the NY-series IPC Machine Controller Industrial Box PC Hardware User's Manual (W556) for detail.

To guarantee S8BA UPS operation in combination with our IPC, the specified combination of UPS and power-supply must be used. The required supply specifications for an Industrial Box PC.

Item	Minimum power requirements
Power supply	240 W
UPS	120 W

The required supply specifications for an Industrial Panel PC.

Item	Minimum power requirements	
Power supply	240 W	
UPS	240 W	

<sup>\*</sup>The total power consumption is the sum of the power consumption of all items that are installed in your Industrial PC.

### **Environmental Specifications**

Item		Specifications		
	item	Industrial Box PC	Industrial Panel PC	
	Ambient operating temperature *1	0 to 55°C		
	Ambient storage temperature *1	-20 to 70°C		
		10% to 90% with no condensation		
		10% to 90% with no condensation		
	Operating atmosphere	No corrosive gases		
	Altitude	2,000 m max.		
	Noise resistance (during operation)	Conforms to IEC61000-4-4, 2 kV (power lines)		
Operation environment	Vibration resistance (during operation)	Conforms to IEC 60068-2-6.  • For a Box PC with an SSD:  5 to 8.4 Hz with 3.5 mm single amplitude and 8.4 to 150 Hz with 9.8 m/s² for 10 times each in X, Y and Z directions.  • For a Box PC with a HDD the vibration resistance depends on the mounting orientation *2.	The vibration resistance depends on the storage device(s):  • For a Panel PC with only SSD storage devices:  5 to 8.4Hz with 3.5 mm single amplitude and 8.4 to 150 Hz with 9.8 m/s² for 10 times each in X, Y and Z directions. Conforms to IEC 60068-2-6.  • For a Panel PC with one or more HDD storage devices the Panel PC must be installed in a vibration free environment. *3	
	Shock resistance (during operation)	Conforms to IEC 60068-2-27. 147 m/s², 3 times in each X, Y and Z directions		
	Installation method	Book mount, Wall mount	Mount on panel	
	Degree of protection *4	_	Front of Monitor: IP65	
	Pollution degree	2 or less: Conforms to JIS B3502 and IEC 61131-2.		
Applicable standards *5		EU Directives: EMC Directive 2014/30/EU (EN 61131-2) and RoHS Directive KC Registration, RCM, cULus, EAC		

<sup>\*1.</sup> The allowed ambient operating temperature and ambient humidity depend on product type, CPU type, mounting orientation, and storage device type.

<sup>\*2.</sup> Vibration resistance depends on the Box PC's mounting orientation and storage device type.

Mounting Orientation	SSD	HDD
Book	9.8 m/s <sup>2</sup>	2.5 m/s <sup>2</sup>
Wall	3.0 11/3	4.9 m/s <sup>2</sup>

\*3. A Panel PC with one or more HDD storage devices should not be used in applications subject to vibration.

Examples of applications subject to vibration:

AGV (Automated Guided Vehicles)

Tableting machine

· Rail vehicle

· Connector pin assembling machine

• Stacker crane

· Bending machine

Elevator

Ensure your Panel PC with HDD does not vibrate. When in doubt use a Panel PC with SSD storage devices.

\*4. The Panel PC may not operate properly in locations subjected to oil splashes for extended periods of time. (Industrial Panel PC type only)

\*5. Refer to the OMRON website (www.ia.omron.com) or contact your OMRON representative for the most recent applicable standards for each model.

### **Storage Device Specifications**

Item	Specifications			
Model	NY000-AS00	NY000-AS01	NY000-AS02 *1	NY000-AH00 *2
Capacity	32 GB	64 GB	128 GB	320 GB
Туре	SSD (SLC)		SSD (MLC)	HDD
S.M.A.R.T. support	Yes			
Rotation speed		_		5,400 r/min
Interface	Serial ATA 3.1			Serial ATA 3.0
Sustained standard read speed	Up to 160 MB/s		Up to 430 MB/s	_
Sustained standard write speed	Up to 150 MB/s		Up to 190 MB/s	-
Operating temperature	0 to 70°C			5 to 55°C
Operating humidity	10% to 95% (with no condensation)			<ul> <li>10% to 95% (with no condensation)</li> <li>29°C wet-bulb temperature max.</li> </ul>
Storage temperature	-40 to 100°C			-40 to 65°C
Storage humidity	10% to 95% (with no condensation)			8% to 90% (with no condensation)     40°C wet-bulb temperature max.
Life	1,500 TB written	3,000 TB written	114 TB written	Approximately 5 years or 20,000 powered-ON hours (whichever comes first) under the following conditions:  • 25°C at 101.3 kPa  • Less than 333 powered-ON hours/month *3  • Less than 20% operation while powered-ON *4  • Less than 1.30 x 10 <sup>6</sup> seeks/month

<sup>\*1.</sup> Orders for NY000-AS02 will be accepted until the end of November 2018.


<sup>\*2.</sup> For a Panel PC with an HDD: this device can only be installed in a vibration free environment only.

**<sup>\*3.</sup>** Powered-ON hours include sleep and standby modes.

**<sup>\*4.</sup>** Operation includes seeking, writing, and reading functions.

### **Dimensions**

### **Industrial Box PC type**

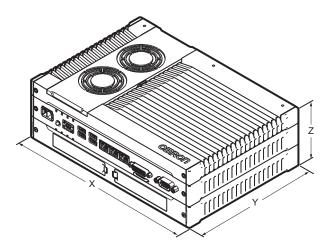



Item	Specifications	
Dimensions	Width X = 282 mm Depth Y = 195 mm. Y = 200 mm including the DVI connectors. Height Z = 88.75 mm	
Weight	3.8 kg	

### **Bracket Specifications**

The metal mounting brackets mount your Industrial Box PC and they are the connection for the functional ground. Use metal screws with a diameter of 4 mm or 5 mm to mount the brackets.


Mounting screw locations for book mount and wall mount orientation:

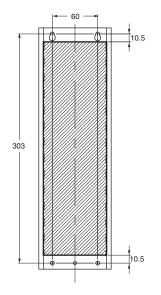

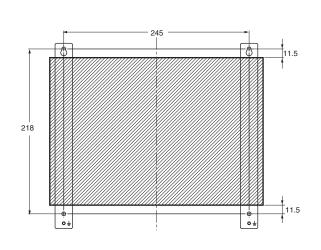

(Unit: mm)

## **Industrial Panel PC type**

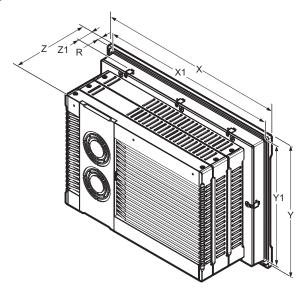

Item	Specifications			
item	12.1 Inch	15.4 Inch		
Panel cutout dimensions	Cutout Width X1 = 314 <sup>-0+1</sup> mm Cutout Height Y1 = 216 <sup>-0+1</sup> mm	Cutout Width X1 = 383 <sup>-0+1</sup> mm Cutout Height Y1 = 259 <sup>-0+1</sup> mm		
Panel thickness range *	Panel thickness range Z1 = 1.6 to 6.0 mm	Panel thickness range Z1 = 1.6 to 6.0 mm		
Dimensions	Width X = 332 mm Height Y = 234 mm Depth Z = 121 mm	Width X = 401 mm Height Y = 277 mm Depth Z = 121 mm		
Monitor thickness in front of panel	Rim thickness R = 8.0 mm			
Weight	6.1 kg 7.2 kg			

<sup>\*</sup>The minimum panel thickness depends on the panel material.

### **Version Information**

#### **Unit Versions**

Units	Models	Unit Version
IPC Machine Controller NY5□2-1		Unit version 1.12 or later
NC Integrated Controller	NY5□□-5	Unit version 1.16 or later

### Unit Versions and Programming Devices Supported by NY5□□-1/NY5□□-5

The following tables show the relationship between unit versions and Sysmac Studio versions.

**Unit Versions and Programming Devices** 

Unit Version *	Corresponding version of Sysmac Studio
1.19	1.24
1.10	1.23
1.18	1.22
1.16	1.20
1.14	1.19
1.14	1.18
1.12	1.17

<sup>\*</sup>There is no NY5□□-1 with unit version 1.11 or earlier. There is no NY5□□-5 with unit version 1.16 or earlier. There is no NY5□□-1 with unit version 1.19.

Note: If you use a lower version of the Sysmac Studio, you can use only the functions of the unit version of the unit that corresponds to the Sysmac Studio version.

If you use a unit with an earlier version, select the unit version of the connected unit or an earlier unit version in the Select Device Area of the Project Properties Dialog Box on the Sysmac Studio. You can use only the functions that are supported by the unit version of the

### Unit Versions, CNC Versions and Programming Devices Supported by NY5□□-5 (NY-series NC Integrated Controller)

Unit Version	CNC Version	Corresponding version of Sysmac Studio
Ver.1.19	Ver.1.01	Ver.1.24
Ver.1.18		Ver.1.23
ver.1.16	Ver.1.00	Ver.1.22
Ver.1.16		Ver.1.20

Note: If you use a lower version of the Sysmac Studio, you can use only the functions of the unit version of the CPU Unit that corresponds to the Sysmac Studio version. If you use a CPU Unit with an earlier version, select the unit version of the connected CPU Unit or an earlier unit version in the Select Device Area of the Project Properties Dialog Box on the Sysmac Studio. You can use only the functions that are supported by the unit version of the connected CPU Unit.

### **Functions That Were Added or Changed for Each Unit Version**

- Additions and Changes to Basic Instructions and Motion Control Instructions For details, refer to the NY-series Instructions Reference Manual (Cat. No. W560) and NY-series Motion Control Instructions Reference Manual (Cat. No. W561).
- · Additions and Changes to Controller Events For details, refer to the NY-series Troubleshooting Manual (Cat. No. W564).
- · Additions and Changes to System-defined Variables For details, refer to the NY-series IPC Machine Controller Industrial Panel PC / Industrial Box PC Software User's Manual (Cat. No. W558).
- · Additions and Changes to NC Integrated Controller Functions For details, refer to the NC Integrated Contoller User's Manual (Cat. No. 0030) and NC Integrated Controller Instructions Reference Manual (G code) (Cat. No. O031).

### **Related Manuals**

Refer to the *Related Manuals* in the data sheet of the NY-series Industrial Box PC or NY-series Industrial Panel PC for the Related Manuals.

				industrial Farier FC for the Helated Maridals.
Manual name	Cat. No.	Model numbers	Application	Description
Industrial Panel PC User's Manual	W555	NYP171115WC100	Learning all basic information about the Industrial Panel PC. This includes introductory information with features, hardware overview, software overview, specifications, mounting, wiring, connecting, operating and maintaining the Industrial Panel PC.	An introduction to the Industrial Panel PC is provided along with the following information:  • Overview  • Hardware  • Software  • Specifications  • Installation  • Operating Procedures  • Maintenance
NY-series IPC Machine Controller Industrial Panel PC Hardware User's Manual	W557	NY532-000	Learning the basic specifications of the NY-series Industrial Panel PCs, including introductory information, designing, installation, and maintenance. Mainly hardware information is provided.	An introduction to the entire NY-series system is provided along with the following information on the Industrial Panel PC.  • Features and system configuration • Introduction • Part names and functions • General specifications • Installation and wiring • Maintenance and inspection
NY-series IPC Machine Controller Industrial Box PC Hardware User's Manual	W556	NY512-000	Learning the basic specifications of the NY-series Industrial Box PCs, including introductory information, designing, installation, and maintenance. Mainly hardware information is provided.	An introduction to the entire NY-series system is provided along with the following information on the Industrial Box PC.  • Features and system configuration  • Introduction  • Part names and functions  • General specifications  • Installation and wiring  • Maintenance and inspection
NY-series IPC Machine Controller Industrial Panel PC / Industrial Box PC Setup User's Manual	W568	NY532 NY512	Learning the initial settings of the NY-series Industrial PCs and preparations to use Controllers.	The following information is provided on an introduction to the entire NY-series system.  • Two OS systems  • Initial settings  • Industrial PC Support Utility  • NYCompolet  • Industrial PC API  • Backup and recovery
NY-series IPC Machine Controller Industrial Panel PC / Industrial Box PC Software User's Manual	W558	NY532-000 NY512-000	Learning how to program and set up the Controller functions of an NY- series Industrial PC.	The following information is provided on NY-series Machine Automation Control Software.  Controller operation  Controller features  Controller settings  Programming based on IEC 61131-3 language specifications
NY-series Instructions Reference Manual	W560	NY532 NY512	Learning detailed specifications on the basic instructions of an NY- series Industrial PC.	The instructions in the instruction set (IEC 61131-3 specifications) are described.
NY-series IPC Machine Controller Industrial Panel PC / Industrial Box PC Motion Control User's Manual	W559	NY532	Learning about motion control settings and programming concepts of an NY-series Industrial PC.	The settings and operation of the Controller and programming concepts for motion control are described.
NY-series Motion Control Instructions Reference Manual	W561	NY532-□□□ NY512-□□□	Learning about the specifications of the motion control instructions of an NY-series Industrial PC.	The motion control instructions are described.
NY-series IPC Machine Controller Industrial Panel PC / Industrial Box PC Built-in EtherCAT® Port User's Manual	W562	NY532 NY512	Using the built-in EtherCAT port in an NY-series Industrial PC	Information on the built-in EtherCAT port is provided. This manual provides an introduction and provides information on the configuration, features, and setup.
NY-series IPC Machine Controller Industrial Panel PC / Industrial Box PC Built-in EtherNet/IPTM Port User's Manual	W563	NY532-□□□ NY512-□□□	Using the built-in EtherNet/ IP port in an NY-series Industrial PC.	Information on the built-in EtherNet/IP port is provided. Information is provided on the basic setup, tag data links, and other features.
NY-series Troubleshooting Manual	W564	NY532-□□□ NY512-□□□	Learning about the errors that may be detected in an NY-series Industrial PC.	Concepts on managing errors that may be detected in an NY-series Controller and information on individual errors are described.
NJ/NY-Series NC Integrated Controller User's Manual	O0300-E1	NJ501-5300 NY532-5400	For numerical control with NJ/NY-series	Describes the numerical control function. When programming, use this manual together with the G Code Instructions Reference Manual (O0301-E1).



Manual name	Cat. No.	Model numbers	Application	Description
NJ/NY-Series NC Integrated Controller Instruction Reference Manual G code	O0301-E1	NJ501-5300 NY532-5400	Learning about detailed specifications of the G code/M code instructions.	This section describes G code/M code instructions in detail. When programming, use this manual together with the User's Manual (O0301-E1).
CNC Operator Operation Manual	O0302-E1	SYSMAC- RTNC0□□□D	Learning the overview of CNC Operator and how to use it.	Describes the CNC Operator, installation procedure, basic operation, connection operation, and operating procedures for main functions.
Sysmac Studio Version 1 Operation Manual	W504	SYSMAC-SE2	Learning about the operating procedures and functions of the Sysmac Studio.	Describes the operating procedures of the Sysmac Studio.
UPS S8BA User's Manual	U702	S8BA	Learning the information that is necessary to use the Uninterruptible Power Supply (UPS) Unit.	An introduction to the UPS is provided along with the following information:  • Overview  • Preparation  • Installation and Connection  • Check and Start Operation  • Maintenance and Inspection  • Shutdown Processing  • I/O Signal Functions  • Troubleshooting

#### Terms and Conditions Agreement

#### Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

#### Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warrantv.

See <a href="http://www.omron.com/global/">http://www.omron.com/global/</a> or contact your Omron representative for published information.

#### Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

#### Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

#### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

#### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions. Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

2018.10

In the interest of product improvement, specifications are subject to change without notice.

